



Cleaning System Manual

OWNER'S MANUAL

For PCC2000, PV3, PVR, Cycleclean, Pool Valet,
New Gen Pool Valet, Vantage,
Vanquish, VectorJet and EcoPool



004-027-8742-00 REV010816
US and Foreign patents and patents pending see
www.1paramount.com/about/patents/

295 East Corporate Place • Suite 100 • Chandler, AZ 85225
Toll Free: 1.800.621.5886 • Phone: 480.893.7607 • Fax: 480.753.3397
Paramount@1Paramount.com • www.1Paramount.com

Signal Words and Symbols Used In This Manual

This Owner's Manual and Installation Guide contains specific precautions and symbols to identify safety-related information. You will find DANGER, CAUTION, WARNING and NOTICE symbols which require special attention. Please read them carefully and follow these precautions as indicated! They will explain how to avoid hazards that may endanger you or persons using or maintaining your pool or spa.



DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.


NOTICE

NOTICE is used to address practices not related to physical injury.

PLEASE REVIEW THE OWNER'S MANUAL AND INSTALLATION GUIDE IN ITS ENTIRETY AND HEED ALL SAFETY INFORMATION. Failure to follow these instructions and warnings can result in DEATH OR SERIOUS INJURY.



DANGER

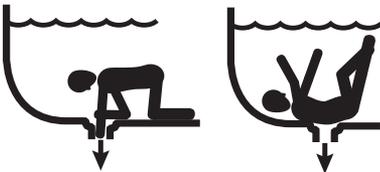

Do not allow body to come into contact with a drain pipe that has a damaged, loose, or missing drain cover. This may result in trapping a swimmer underwater.

DEATH or **SERIOUS INJURY** will result from contact with a damaged, loose, or missing drain cover.

- Do not allow limbs to contact or be inserted into a drain pipe with a damaged, loose, or missing drain cover. This could result in swelling of the limb and/or trapping a swimmer underwater.
- Avoid mechanical entrapment of jewelry, swimsuit, hair decorations, finger, toe, or knuckle in a drain pipe with damaged, loose, or missing drain cover. This may result in trapping a swimmer underwater.

MAINTENANCE INSTRUCTIONS & WARNINGS:



WARNING

DEATH or **SERIOUS INJURY** can result from pool or spa drain covers or grates that are clogged by debris.

All pool and spa drain covers may become obstructed by debris and should be cleaned periodically due to clogging from debris, such as pieces of plastic, hair, fabric, twigs, leaves, seeds, etc.

The frequency of periodic cleaning will vary depending on the amount and type of debris introduced into the pool or spa

Clogging of the drain cover will increase the suction effect and increase the likelihood of death or serious injury from those hazards listed above.

A clogged drain can negatively affect the safety of the drain.

It is advisable to have a qualified pool or spa professional perform this inspection and debris removal from the pool and spa drain covers.

SUCTION ENTRAPMENT HAZARD:

 **DANGER**

DEATH or SERIOUS INJURY will result if a drain cover or grate is not installed and used correctly.

- Pool and spa pumps produce high levels of suction and move high volumes of water, which can cause death or serious injury if a person comes in close proximity to pool or spa drains.
- Keep clear of pool and spa drains to avoid death or serious injury from suction.

 **DANGER**

DEATH or SERIOUS INJURY will result from hair entanglement or limb entrapment.

- Keep clear of pool and spa drains.
- Hair sucked into pool or spa drains will tangle and knot trapping the swimmer underwater. Avoid placing your hair near a pool or spa drain.
- Avoid sitting on pool or spa drains because the suction can cause severe intestinal damage, evisceration, and/or disembowelment.



 **DANGER**

DEATH or SERIOUS INJURY will result from pool or spa drain covers or grates that are improperly installed, missing, clogged, or broken.

- Inspect pool and spa regularly to insure that drain covers and grates are properly in place and secured.
- Ensure that drain covers are not damaged, cracked, broken, loose, clogged, not properly secured, or missing because these conditions increase the chance of death or serious injury from entrapment.
- If a drain cover is discovered damaged, cracked, broken, loose, clogged, not properly secured, or missing, you should:
 - Close the pool or spa immediately; and,
 - Post a closure notice and keep the pool or spa closed until an appropriate ANSI/APSP -16-2011 certified drain cover is properly installed.

TABLE OF CONTENTS

Congratulations	4
What You Need To Know	4
What Is A Water Valve?	5
Unique Water Valve Features	5
Water Valve Part Numbers	6
Water Valve Instructions	7
Module Installation/Inspection	8
Module Alignment	9
Run/Pause Control Switch	10
Nozzles (Cleaning Heads).	11
Nozzle Removal /Installation.	11
Optional Paramount Debris Canister	13
Relationship With Pool Equipment	13
Operating Instructions	15
Troubleshooting	16
Pool Information	19
In-Floor Warranty Registration.	19

CONGRATULATIONS

Congratulations on your new pool and thank you for choosing one of Paramount's cleaning or circulation systems. This manual will address all of Paramount's systems, the PCC2000, PV3, PVR, Cyclean, Pool Valet, New Gen Pool Valet, Vantage, Vanquish, Step Clean and Eco Pool. Your system may also include a Paramount debris canister and one or more of Paramount's Drains (MDX-R3, MDX2, Buzztop Channel Drain and/or SDX).

WHAT YOU NEED TO KNOW

Your system's performance will be maximized by adhering to the following operating instructions, and can be affected by seasonal weather conditions that may require extended periods of operation. The cleaning performance directly relates to the type and design of your specific Paramount system.

It is recommended you call your pool builder or a professional service company if your pool requires attention.

WHAT IS A WATER VALVE?

The Paramount water valve is fully automatic and operates whenever the pump it's connected to is running. Your Paramount water valve may be connected to your filter pump or a stand-alone "booster" pump.

The water valve automatically distributes water to different areas of your pool, which can include the floor, steps, benches, spa and water features. It cycles much like an automatic sprinkler system in your yard switching from one circuit to another (Figure 1 shows the combination of water valves). Every water valve has a center port. This is where the water enters the valve. You will have a 2-port, 3-port, 6-port, 9-port or 12-port system depending on the design of your pool. The port count of the water valve indicates the number of circuits that send water back to your pool or to another water valve. Cleaning nozzles or returns are placed at the end of the circuits.




Combination Water Valves (9-Port and 12-Port)

A 9-port system consists of 2 water valves, a 6-port and a 4-port. The 4-port valve has 3 circuits to the pool and 1 circuit that powers the 6 port valve for a total of 9 circuits going to the pool. On this type of system the 3 circuits on the 4-port valve fire twice as often as the other 6 circuits on the six port valve. Your system is designed specifically to take advantage of this firing sequence.

A 12-port system consists of 3 water valves, two 6-ports and one 2-port, 5 gear valve. The 2-port alternately powers each 6-port valve. Your system is designed specifically to take advantage of this firing sequence.

Figure 1

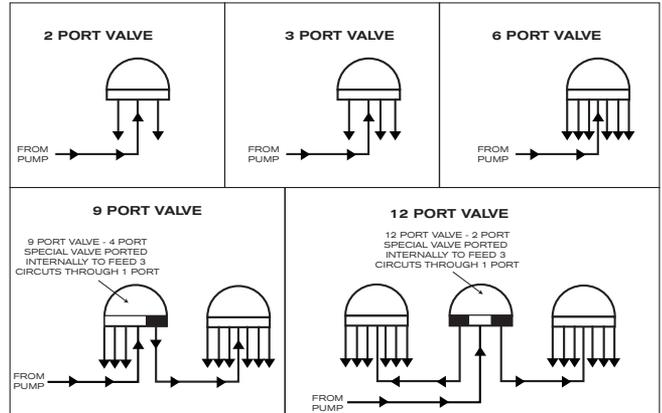


UNIQUE WATER VALVE FEATURES

The run/pause switch on the top of the valve allows you to pause the system to isolate a circuit in an out of the way area of the pool.

The one-piece replacement module design allows for easy installation.

The gauge on your water valve is important and tells you how the system is operating. Gauges should be replaced when they become unreadable or inaccurate. Never use Teflon tape on a replacement gauge, use a thread sealant that is approved for plastic such as Teflon paste. Hand tighten gauge as over tightening can crack the water valve lid.

WATER VALVE PART NUMBERS

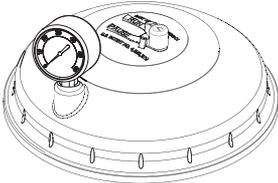


005-302-3590-00
Pressure Gauge

005-302-3502-00
Pause Assembly
Includes: Screw Knob, O-Ring & Pawl




005-302-4300-03
Top Dome Complete
Includes: Top, Gauge & Pause Assembly

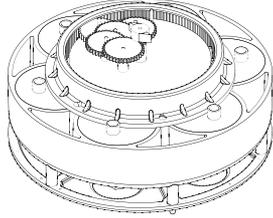

Modules:


004-302-4400-00	2 Port 4 Gear
004-302-4402-00	2 Port 5 Gear
004-302-4404-00	3 Port
004-302-4406-00	4 Port
004-302-4408-00	6 Port

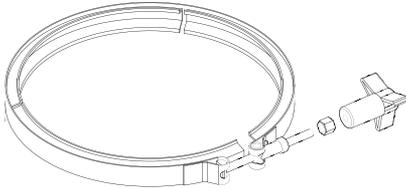


005-302-3570-00
Band Clamp (Complete) Includes Knob & Nut

005-302-3600-00
Band Clamp Knob

005-302-0640-00
Band Clamp Nut

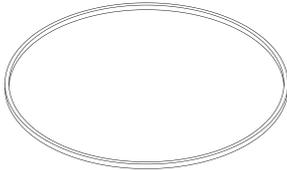

005-302-0100-00
Base O-Ring

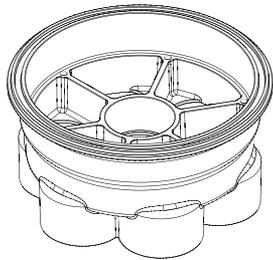

Valve Base (US)*:

005-302-4002-03	2 Port Base 2" Black
005-302-4012-03	3 Port Base 2" Black
005-302-4018-03	4 Port Base 2" Black
005-302-4032-03	6 Port Base 2" Black

Valve Base (Metric):

005-302-4006-03	2 Port Base 63 mm Black
005-302-4019-03	3 Port Base 63 mm Black
005-302-4020-03	4 Port Base 63 mm Black
005-302-4033-03	6 Port Base 63 mm Black

*US 2" is equivalent to Australian 50 mm.

WATER VALVE INSTRUCTIONS



WARNING


Turn off all equipment including pumps. Do not stand over valve while the pump is on. Warning: A hazardous situation which, if not avoided, could result in death or serious injury.

How to open the water valve

1. Remove the band clamp by turning the clamp knob or 7/16 inch nut counter-clockwise until it comes off the bolt. Then carefully pull the clamp away from the valve.
2. Lift the top off the base being careful to not lose or stretch the o-ring. Remove the module by lifting up and out of the base.

NOTICE

The module is designed to seal inside the base so it may require a side to side or rocking motion while lifting out. Do not pull the module by the gear mechanism. This can result in damage to the module.

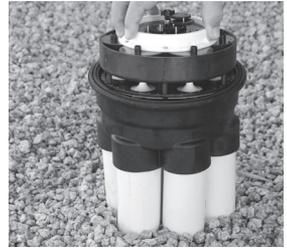

How to close the water valve

1. Check the o-ring and groove for debris, and clean if necessary (this is a quad ring and is almost square, the height is slightly bigger than the width)
2. Replace the o-ring if it is stretched or damaged. The o-ring does not require any lubrication. Lubricating The o-ring can attract dirt and debris that could prevent it from sealing. Never use petroleum jelly on plastic or rubber parts, as this will damage them.
3. Place the run/pause switch in the run position then install the valve top onto the base. The lid may be rotated in any direction for easy viewing of pressure gauge.
4. Place the band clamp around the valve shells and put the clamp knob or 7/16 nut on the threaded bolt.
5. Tighten the knob/nut securely. Gently tap the band clamp starting opposite the knob/nut going around both sides. While periodically tightening the knob/nut. Be careful not to over tighten the knob/nut.
6. Turn on the pump and inspect the water valve for leaks. If you find leaks, turn off the pump and tighten the band clamp more. If it continues to leak, repeat the above steps. If this doesn't work, replace the o-ring.

MODULE INSTALLATION/INSPECTION



WARNING

Turn off all equipment including pumps. Do not approach the water valve while the lid is removed and the pump is on. Failure to do so can result in injury or death. A hazardous situation which, if not avoided, could result in

death or serious injury.

The module is designed to seal inside the base so it may require a side to side or rocking motion while lifting out. An easy solution is to turn the pump on and off quickly. Do not pull the module by the gear mechanism. This can result in damage to the module.

Module Inspection

1. Check the o-ring and groove for debris, and clean if necessary (this is a quad ring and is almost square, the height is slightly bigger than the width).
2. Replace the o-ring (Part # 005-302-0100-00) if it is stretched or damaged. The o-ring does not require any lubrication. Lubricating o-ring can attract dirt and debris that could prevent it from sealing. Never use petroleum jelly on plastic or rubber parts, as this will damage them.
3. Set the module in the base and turn until the alignment pins on the bottom of the module drop into the alignment holes in the base (Figure 3).
4. The module should fit in the base without forcing it. If it does not seat easily then check the following.
5. (Figure 3) shows the piston portion of the current module design (released 06-2011). These pistons are set at the factory. Do not touch, pull or turn these pistons. Any handling will negatively affect the performance and fit of this product.
6. If the flow optimizer (Figure 4) prevents the module from seating properly in the base you may have to remove it. To remove optimizer press in on the 3 clips and pull to separate.

Figure 3


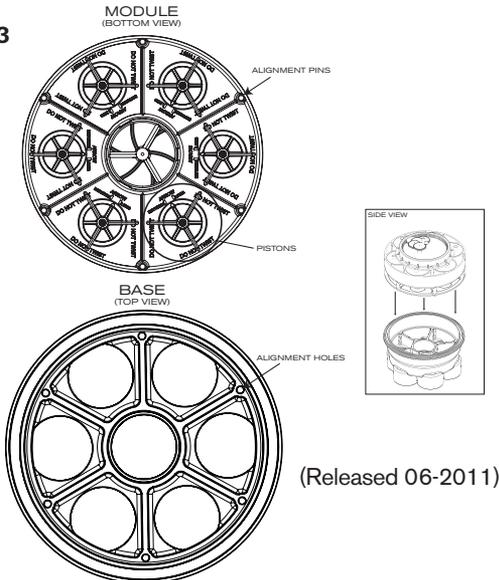


Figure 4

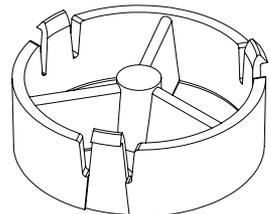

MODULE ALIGNMENT

Module Installation & Alignment Guide (2-port, 3-port, 4-port)

2-port module alignment

On the 2-port module the ports on top of the module that are attached together by connectors must be centered over the open ports in the valve base.

2 PORT / 4 GEAR // MODULE, BASE

Used for basin & spa applications, Eco Systems & Swing Sweep



Module Part# 004-302-4400-00



Base Part# 005-302-4002-03 (2")
005-302-4006-03 (63mm)

2 PORT / 5 GEAR // MODULE, BASE

Used on 12 port systems to feed the two 6 port valves



Module Part# 004-302-4402-00



Base Part# 005-302-4002-03 (2")
005-302-4006-03 (63mm)

3-port module alignment

On the 3-port module the ports on top of the module that are attached together by connectors must be aligned over an open port and a closed port section.

3 PORT // MODULE, BASE

Used for Eco Systems & Swing Sweep



Module Part# 004-302-4404-00



Base Part# 005-302-4012-03 (2")
005-302-4009-03 (63mm)

4-port module alignment

On the 4-port module the ports on top of the module that are attached together by a connector must be aligned over the half of the base that has only one port.

4 PORT // MODULE, BASE

Found on 9 port systems - feeds 6 port valve



Module Part# 004-302-4406-00



Base Part# 005-302-4018-03 (2")
005-302-4020-03 (63mm)

6-port module alignment

The 6-port module can be placed in any position as long as the alignment pins line up and the module is seated securely in the valve body.

6 PORT // MODULE, BASE



Module Part# 004-302-4408-00



Base Part# 005-302-4032-03 (2")
005-302-4030-03 (1 1/2")
005-302-4038-03 (63mm)

*US notation of 2" is equivalent to Australian 50 mm.

RUN/PAUSE CONTROL SWITCH

The run/pause control switch is used to stop the cleaning system circuits from cycling. When switched to the pause position, it will stop on the circuit that is up at that time. The run/pause control switch should only be used when you desire the nozzles not in the up position to remain down or while servicing the system.

Note: The run/pause control switch can be used without turning off the pump, but can cause damage to the water valve or module diaphragms if overused. If you frequently use the run/pause control switch you should turn off the pump first. Always turn the run/pause control switch to the run position when removing and replacing the water valve lid.

Figure 6



NOZZLES (CLEANING HEADS)

All Paramount nozzle locations and sizes are specific to your pool. These nozzles have different sized openings and if removed, should be returned to the same location.

NOTICE

Switching nozzle(s) location will result in poor cleaning and could severely damage your pool equipment.

All of your system nozzles must extend and retract completely with each cycle of the water valve. Depending on the cleaning system, it will take 12 to 18 cycles for a nozzle to rotate 360 degrees. There are two exceptions to this.

The PCC2000 and Vantage systems can have one to three nozzles (called Fixed Nozzles) that do not rotate and remain active while pool filter pump is on. These nozzles are located near the main drain and need to be aimed at the main drain.

The optional Swing Jet nozzles are placed on the sidewall of a pool, and rotate back and forth between three positions in a 90-degree arc. They must retract and extend fully to move to the next position.

NOZZLE REMOVAL /INSTALLATION

NOTICE

Sand and pebbles can get between the body and the nozzle and make it very difficult to remove a nozzle. To make the nozzle removal easier, use a pressure nozzle on a garden hose (like you use to clean the side walk)


and blow the debris out between the nozzle and body before using the tool to remove the nozzle. The nozzle is specific to the body it came out of. Always put the nozzle back in the same body it came out of.

Nozzles may need to be removed from time to time for purposes of winterizing or to flush debris from the lines and/or nozzles. There are 3 methods of removing the 8 different types of nozzles.

Method 1: Large Nozzles

For Vanquish, Vantage, PCC2000 and VectorJet floor nozzles see Figure 7. Using the removal tool common to these nozzles, attach the tool to the end of your pool pole placing it over the nozzle and making sure the tool tabs insert into the nozzle slots. Turn the tool clockwise a 1/4 turn to unlock the nozzle and then lift it from the body in the floor of the pool. When replacing the nozzle, be sure the body is free from all debris or the nozzle will not lock in place. Make sure the o-ring on the bottom of the nozzle is in place. Lock the nozzle into the tool on the end of your pool pole and replace the nozzle in the body and turn counter clockwise to lock into the body.

Figure 7

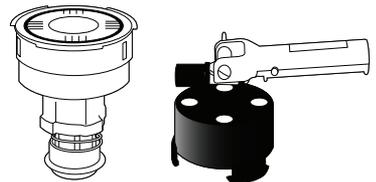


Part Number: 004-552-5440-00

Large nozzle tool part #004-552-5440-00

Method 2: Small Nozzles

Some PCC2000 systems used the large floor nozzle in the steps. See Method 1 for removal and installations instructions. PV3, Cycleclean and PCC2000 step nozzles see Figure 8. Using the removal tool common to these nozzles, attach the tool to the end of your pool pole placing it over the nozzle and making sure the tool tabs insert into the nozzle slots. Turn the tool counter-clockwise a 1/4 turn to unlock the nozzle and then lift it from the body in the floor of the pool. Make sure the o-ring on the bottom of the nozzle is in place. When replacing the nozzle, lock the nozzle into the tool on the end of your pool pole and replace the nozzle in the body and turn clockwise to lock into the body.

Figure 8

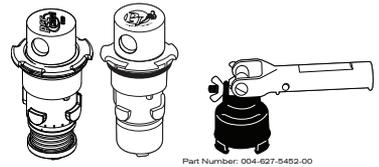


Small nozzle tool part #004-552-5452-00

Method 3: Pool Valet

Pool Valet (released in 1980) and Step Clean see Figure 9. Using the removal tool common to these nozzles, place the ends of the U-shaped tool in 2 of the slots and turn counter-clockwise. This is a threaded retainer ring that will require 3 full turns to remove. If you experience difficulty unthreading the retainer ring tap on it gently. This is best accomplished by tapping on the top of the tool. The amount of force necessary can vary depending on how long the nozzle has been installed. When replacing the threaded ring of the nozzle wrap it twice with Teflon tape. This will make for easy removal in the future. Turn it clockwise approximately 3 turns until it is snug in the body.

Figure 9

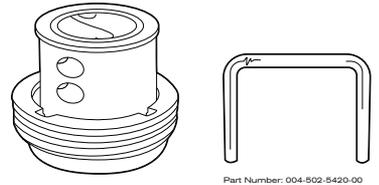


Pool Valet nozzle tool part #004-502-5420-00

Method 4: New Generation Pool Valet

New Pool Valet (October 2012) Using the removal tool common to these nozzles, place the tool in the 4 slots and turn counter-clockwise. This is a threaded retainer ring that will require 1 full turn to remove. If you experience difficulty unthreading the retainer ring tap on it gently. When replacing the nozzle, snap the center of the nozzle into the tool on the end of your pool pole and replace the nozzle in the body, turning clockwise 1 full turn to lock into the body.

Figure 10

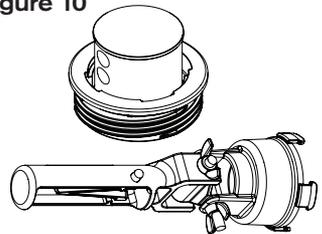

Pool Valet nozzle tool part #004-502-5420-00

OPTIONAL PARAMOUNT DEBRIS CANISTER

Your pool may be equipped with the Paramount optional deck side debris canister (DDC), which would be located in the deck next to your pool or the equipment side debris canister (EDC) on the equipment pad. The debris canister is where the debris from your pool is gathered after it passes through the drain. It is important the debris is emptied from the debris canister's catch basket regularly, just like your skimmer and pump baskets, so your pool equipment will continue to operate efficiently. The DDC has a patented water sealed easy to remove twist lock lid that needs no o-ring. The DDC canister's water sealed lid has an equalizer running from the debris canister to the pool to keep water on top of the lid. The equalizer line must be kept clear from obstructions.



DDC
DECK DEBRIS CANISTER

EDC
EQUIPMENT DEBRIS CANISTER

RELATIONSHIP WITH POOL EQUIPMENT

Cleaning Systems Powered by the Filter Pump

Pumps must be capable of maintaining 20 psi (138 kPa) on the water valve(s) pressure gauge. Your pump must be capable of maintaining 20 psi (138 kPa) at the water valve regardless of the additional features on your pool such as spas, solar heating systems, heat pumps, water features, chlorinators, or any other device that is powered by your pump.

Adding items to your filter system after construction (solar, heat pumps, water features, chlorinators, and any thing that takes pressure away from the nozzles) will have a negative effect on the cleaning system. Please contact your builder or Paramount before adding these items.

Keeping filter clean is required to maintain the 20 psi (138 kPa) at the water valve. A dirty filter will prevent your system from cleaning the pool.

The in-floor system comes with a pressure gauge on the water valve and although the system may operate at lower psi, the best cleaning results require 20 to 24 psi (138-165 kPa) at the water valve pressure gauge. You will see reduced performance if the system is operated at less than ideal pressure.

The systems cleaning cycle is determined by many factors (landscape, temperature, weather and condition of pool equipment). To determine your cleaning cycle, run the pool until it is clean. In extreme conditions an extended cycle will be necessary.

It is important to keep the skimmer and pump basket(s) empty, so your pool equipment will power your in-floor system. Failure to do so will negatively affect the performance of your system.

When cleaning your cartridge or D.E. Filter care must be taken before removing the filter elements that the filter tank be drained and rinsed out. This is required to prevent dirt and debris from entering the return line and getting into your in-floor system or any other down-line components.

Cleaning Systems Powered by a Booster Pump

Because booster pump systems are designed to pull from the skimmer(s) and not use a filter, they are not affected by the typical reductions in performance that affect filter pump systems. Booster pumps need to produce a minimum of 65 gpm (246 lpm) at 60 ft. (179kpa of head).

It is important to keep the skimmer and pump basket(s) empty, so your pool equipment will power your in-floor system. Failure to do so will negatively affect the performance of your system.

Filters

A clean pool filter is necessary for optimum system performance. Your pool filter needs cleaning when filters pressure increases 5 psi (34 kPa) above the pressure showing when your filter is clean. If the need arises to replace your filter and/or its backwash valve it is important that they are properly sized.

- Sand Filter minimum size 4.9 square feet/.46 square meters
- D.E. Filter minimum size 48 square feet/4.5 square meters
- Cartridge Filter minimum size 200 square feet/19 square meters
- Backwash Valve minimum size 2 inch or 63 mm Europe
- Backwash Valve minimum size 2 inch or 50 mm Australia

NOTICE

Larger filter sizes will reduce the amount of cleaning needed. Be sure your replacement filter is adequately sized for your existing pump.


Valves for a Single Pump System

The skimmer suction should be restricted to make the main drain pull more, because water takes the path of least resistance, and in-floor systems do most of their cleaning from the main drain. Returns, spa over flows, and water features must be turned off or restricted on single pump system so that the in-floor system will have proper pressure. Minimum 20 psi (138 kPa) is needed to run the system.

Chlorinators, Tablet or salt systems, Ozone units and Solar Systems

Cells on salt chlorinators must be kept clean. Failure to do so will reduce the performance of your in-floor cleaning system. If you add a salt chlorinator after your pools construction it is recommended to put cells on a bypass loop. Any device that uses a venturi injection system on the return side of the filter is not recommended on single pump in-floor system. Solar systems on a single pump require a specific plumbing method, which includes a small booster pump for the solar system (Figure 11).

Figure 11

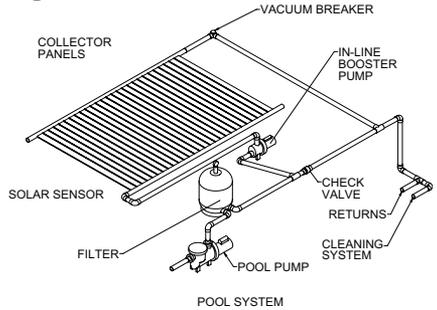

OPERATING INSTRUCTIONS

On all Paramount in-floor cleaning and circulation systems it is important to keep the skimmer, the pump and the debris canister baskets clean. It is also important to clean your filter when the pressure rises 5 psi (34 kPa) over the clean starting pressure.

The gauge on your water valve is important and tells you how the system is operating. Gauges can deteriorate over time and should be replaced when they become unreadable or inaccurate.

NOTICE

Never use Teflon tape on a replacement gauge, use a thread sealant that is approved for plastic such as Teflon paste. Hand tighten gauges as over tightening can crack the water valve lid.

If a nozzle is stuck open or up when the pump shuts off you may clear it by pushing down on it a few times while pump is on to clear the obstruction.

No cleaning system is 100%. Paramount's in-floor guarantee is the strongest in the industry but some attention to the pool is required to keep your backyard oasis beautiful. You must keep your chemicals at proper levels, and brush any small areas that may have a build up of heavy sand or debris. Keep in mind that when excessive debris gets into a pool, such as large amounts of leaves in the fall or dirt during a dust storm, no cleaning system can do the job without some help, so be sure your equipment is maintained.

On PCC2000 and Vantage systems that may have fixed nozzles they may need to be adjusted to keep their flow of water aimed in the direction of the debris drain. These nozzles can be turned clockwise when in the up position by pushing down slightly and rotating them towards the main drain.

For further instructions see troubleshooting.

TROUBLESHOOTING

It is always best to call a trained professional to service your pool.

Further information on your cleaning system can be found at: www.1paramount.com

Problem	Diagnosis	Solution
<p>Cleaning nozzles(s) are staying up when the pump is off</p>	<p>Cleaning nozzles could be jammed with sand or debris which could result from improper cleaning of your pool filter. See section Paramount's systems relationship to your pool's equipment.</p>	<p>Isolate the circuit of the jammed or stuck cleaning nozzles using the pause switch on your water valve. With the system pump running push the cleaning nozzles down repeatedly with your foot or pool pole.</p>
<p>Cleaning nozzles on a circuit stay up once the water valve has switched to the next circuit but retract when the system is off.</p>	<p>A circuit in the water valve is staying open due to a jammed piston in the module. This could be caused by debris entering the water valve.</p> <p>NOTE: PCC2000 AND VANTAGE BOOSTER PUMP SYSTEMS MAY HAVE FIXED NOZZLES ON THE FILTER PUMP WHICH STAY UP WHILE THE FILTER PUMP IS ON.</p>	<p>Remove the module from the water valve (see module removal procedure) clean it by holding it in the pool sideways and move it back and forth quickly until it is clean. If there are any pistons in the open position, push them shut being sure not to rotate them. Place the module back in the water valve (see module installation procedure) and turn the system pump on to determine if the cleaning nozzles are now functioning properly. Depending on the age of the module, if this does not solve the problem it may be time to purchase a new module.</p>
<p>System is not cleaning as it used to.</p>	<p>Check for minimum operating pressure of 20 psi (138 kPa) on the water valve.</p>	<p>Check the run time of your in floor system. It may need to be extended. Especially during increased demand due to weather conditions or bather load. Refer to the section titled Paramount's systems "relationship to your pool's equipment". If after following these steps and the problem still exists call a trained professional to service your pool.</p>

<p>System is not cleaning as it used to.</p>	<p>Pool drain is plugged.</p>	<p>With the filter pump and booster pump (if applicable) both running adjust your valves on the filter pump to draw 100% from the pool drain. If your filter pump becomes noisy (cavitates) your pool drain may be obstructed. At this point call a trained professional to service your pool.</p>
<p>An area around one nozzle that is going up and down is not being cleaned.</p>	<p>Cleaning nozzle is partially or completely blocked.</p>	<p>Refer to the Nozzle/Installation and Removal section. Remove the nozzle. With the nozzle removed turn on the system pump to blow out the circuit. Check the nozzle for debris stuck inside. Replace the nozzle.</p>
<p>The water valve stays on one circuit. One circuit of nozzles running constantly and not switching.</p>	<p>Run/Pause switch is in the pause position. The module gear mechanism could be jammed. System could have incorrectly sized nozzles System could have a plugged circuit</p>	<p>Turn the run/pause switch to run. Take the module out of the water valve (refer to Water Valve Instructions) and confirm that the gear mechanisms turn freely. If it does not, remove all debris. If it still does not work, replace the module. Check for pressure above 25 psi (172 kPa) at the water valve. If the pressure does not change or changes very slowly (longer than 3 minutes) and if the nozzle(s) have been removed they may have been replaced in the wrong locations. Nozzle(s) are size and location specific to your system. Remove nozzle(s) refer to the Nozzle/Installation and Removal section. Turn the system pump on to blow out the circuit. Replace Nozzle(s).</p>



Paramount

Pool Life. Simplified.™

Paramount Pool & Spa Systems (PP&SS)
295 E. Corporate Place, Suite 100
Chandler, AZ 85225
1 800 621 5986 | 1 Paramount.com
www.1.paramount.com/about/parents/

In compliance with the Magnuson-Moss Warranty-Federal Trade Commission Act (Public Law 93-0637; Paramount Pool & Spa Systems (PP&SS)) provides the following limited warranties.

CONDITIONS

This limited warranty shall be subject to the original owner complying with the following conditions:

1. The swimming pool shall be kept full of water at all times except for purposes for repair or maintenance not to exceed five (5) days.
2. The PP&SS system shall be operated by the original owner with reasonable care and necessary maintenance.
3. Registration card must be mailed to PP&SS within thirty (30) days of pool completion.

PP&SS NOZZLE AND BODY, (EXCLUDING NEW GENERATION POOL VALET, POOL VALET RETRO, PRIVATE LABEL VERSIONS OF NEW GENERATION POOL VALET NOZZLES AND BODIES) ASSEMBLIES LIMITED LIFETIME MANUFACTURERS WARRANTY

PP&SS warrants to the original owner, materials and equipment to be free of defects for as long as original owner owns pool, determined under this warranty to be for the Lifetime of the Pool. This warranty shall be void if the materials and equipment covered under the PP&SS Nozzle and Body Assembly, (PVC plumbing installed, labor, material and all other work performed by contractors is not covered under PP&SS Warranty).

PP&SS RETROLETS (CABETAKER CABETAKER 99 GAMMA 3 NET N' CLEAN, POOL VALET RETRO, QUIKCLEAN, QUIKCLEAN 2)

LIMITED MANUFACTURERS 3-YEAR WARRANTY

PP&SS warrants to original owner, materials, and equipment to be free of defects for a period of three (3) year from date of purchase. The materials, parts, and/or related component parts supplied or distributed by PP&SS are covered under this three (3) Year limited warranty, (PVC plumbing installed, labor, material and all other work performed by contractors is not covered under PP&SS Warranty.)

PP&SS MDX-R3 ANTI-ENTRAPMENT VGB COMPLIANT DEBRIS DRAIN & SUX

HIGH FLOW DRAIN

LIMITED MANUFACTURERS 3-YEAR WARRANTY

PP&SS warrants to original owner, materials, and equipment to be free of defects for a period of three (3) year from date of swimming pool start-up. The materials, parts and/or related component parts supplied or distributed by PP&SS are covered under this three (3) year limited warranty, (PVC plumbing installed, labor, material and all other work performed by contractors is not covered under PP&SS Warranty.)

PP&SS NEW GENERATION POOL VALET ASSEMBLIES AND PRIVATE LABEL VERSIONS OF NEW GENERATION POOL VALET NOZZLES AND BODIES

LIMITED MANUFACTURERS 3-YEAR WARRANTY

PP&SS warrants to original owner, materials, and equipment to be free of defects for a period of three (3) years from date of purchase. The bodies, nozzles, water valve and/or related component parts supplied or distributed by PP&SS are covered under this three (3) years limited warranty, (PVC plumbing installed, labor, material and all other work performed by contractors is not covered under PP&SS Warranty.)

PP&SS DISTRIBUTION WATER VALVE LIMITED MANUFACTURERS 3-YEAR WARRANTY

Paramount water valve module and housing are warranted for a period of three (3) years to be free of manufacturing defects including wear and tear on product from date of pool start-up. This warranty applies to the original pool owner only. Replacement parts thereafter are warranted for a period of one (1) year.

PP&SS DEBRIS CONTAINMENT CANISTER (DCC) & EQUIPMENT SIDE DEBRIS CANISTER (EDC) LIMITED MANUFACTURERS 3-YEAR WARRANTY

PP&SS warrants to original owner, materials, and equipment to be free of defects for a period of three (3) years from date of swimming pool start-up. The materials and equipment covered under this warranty shall be void if the materials and equipment covered under this warranty are installed, labor, and all other work performed by contractors is not covered under PP&SS Warranty. The PP&SS Canister Debris Containment Basket, Internal Canister Lid, and Top Deck Lid are covered for a period of one (1) year under this warranty.

OTHER RELATED SYSTEM PARTS, ANCILLARY PARTS AND REPLACEMENT PARTS LIMITED MANUFACTURERS 1-YEAR WARRANTY

PP&SS warrants to original owner, materials and equipment to be free of defects for a period of one (1) year from date of swimming pool start-up. The materials, parts and/or related component parts supplied or distributed by PP&SS are covered under this one (1) year limited warranty. (PVC plumbing installed, labor, material and all other work performed by contractors is not covered under PP&SS Warranty). Replacement parts are warranted for a period of 1 year from the date of purchase. PP&SS warrants to original owner a one (1) year limited warranty that the PP&SS related component parts to be free of defects from the time of installation.

REPLACEMENT CONDITIONS

This warranty is the responsibility of the owner to remove the PP&SS Nozzle & Body Assembly, Distributor, Water Valve, Top/Bottom Housing, Debris Containment Canister or other related system components described with this warranty, contact PP&SS for an RMA number, and return it to PP&SS. Ship part in question freight pre-paid, and upon confirmation of defect, PP&SS will repair or replace the PP&SS warranted at no charge to the original owner. The repaired or replaced PP&SS item will be returned to the original owner with freight C.O.D. Labor to reinstall the repaired or replaced item is the sole responsibility of the owner.

LIMITATIONS

No warranty extends to any part of the PP&SS parts or components which is caused by any of the following conditions or events:

1. Defects or failures caused by abuse, lack of responsible care, lack of necessary maintenance, improper operation, vandalism, acts of God.
2. Disturbances, failures caused by abnormal use, negligent care, lack of necessary maintenance, or failure to follow instructions, acts of God.
3. PP&SS expressly denies any responsibility or liability for incidental or consequential damages arising out of, or as a result of, use or ownership of your PP&SS parts or as a result of use or ownership of your PP&SS parts or components, or other related products covered under this limited warranty.
4. Any defects caused by acts of God, such as storms, earthquakes, ground movement, or freezing, etc., that are beyond the normal conditions.
5. Installation of the PP&SS System by non-authorized installer may render this warranty null and void.
6. Paramount does not warranty against product fading and/or discoloration.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Implied warranties are limited in duration to the duration of the written limited warranty hereon. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that may vary from state to state.

POOL INFORMATION

Your Pool Builder will provide the below information upon request:

Pool Builder: _____

Pool Start-up Date: _____

Filter Pressure (After Backwash): _____

Water Valve Pressure (After Backwash): _____

Backwash Filter When Pressure Reaches: _____

Gallons of Water in Pool: _____

Gallons of Water in Spa: _____

IN-FLOOR WARRANTY REGISTRATION

You may also register your in-floor cleaning system and products online at www.1paramount.com/products/warranty.

Clearly print information requested below and mail this care to secure your cleaning system warranty. Warranty not valid unless this care is postmarked within thirty (30) days of project completion. The cleaning system warranty is limited by the conditions outlined in the owner's manual.

Pool Company Name		
Pool Company City	State	
Cleaning System Owner's Name		
Address (Location of pool)		
City	State	Zip
Owner's Telephone		
Owner's E-mail		
Date of interior finish completion/date of product purchase		
Type of pool <input type="checkbox"/> Concrete <input type="checkbox"/> Vinyl <input type="checkbox"/> Fiberglass		
In-floor cleaning system <input type="checkbox"/> PV3 <input type="checkbox"/> PVR <input type="checkbox"/> PCC2000 <input type="checkbox"/> Cyclean <input type="checkbox"/> Vanquish <input type="checkbox"/> Vantage <input type="checkbox"/> Pool Valet <input type="checkbox"/> New Generation Pool Valet		

PLACE WARRANTY REGISTRATION IN ENVELOP AND MAIL TO

Paramount Pool & Spa Systems
295 E. Corporate Place
Suite 100
Chandler, AZ 85225

